


Combo Chip Instructions



Some of the newer Epson CISS come with a combo chip that will allow you to reset the cartridges without taking the cartridges out of the printer.

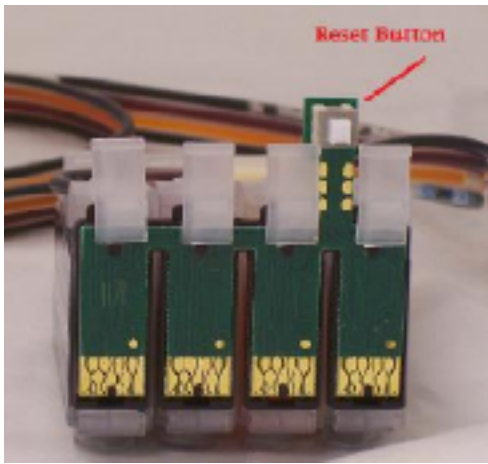

When the ink indicator light turns red and your computer tells you to change cartridges, please press the "Replace Cartridge Button" which is flashing on the printer.



The printer will tell you which cartridges will need to be reset. Now hit the "Replace Cartridge Button" again so that the cartridge carriage moves into position for you to replace the cartridges.



Now, simply press the reset button on the CISS and press the "Replace Cartridge Button" on the printer and once again the ink levels will read as full.