


COMBO CHIP INSTRUCTIONS

Currently with the continuous updates of Epson compatible Chips, more and more CISS users found that it's difficult to reset chips when ink is used up. Users have to remove the cartridges out and install again to reset Chips. It causes more trouble in this way.

Therefore a new Combo Chip with the **Reset button** to solve the above problems for CISS users. The White button ① (as the first picture shown) is the Reset button. By pressing this button you can easily Reset Chips. No need to take out the cartridges to reset any more.

Below please find the detailed instruction about how to use this new combo chip and how to reset with white button.

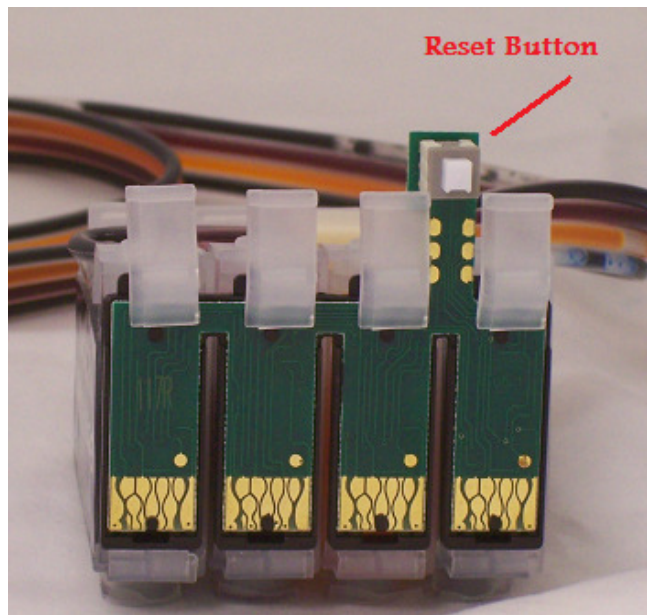

Function of the Reset Button



When the ink indicator light turns red and computer informs you to change cartridges, please press the Replace-cartridge-button (which is flashing) on the printer.



The printer will show you the cartridges which should be reset. Then press the Replace-cartridge-button again to move the cartridges carriage to replaceable position.



After that, just press the Reset Button and then press the Replace-cartridge-button to initiate the printer; The ink bar will become full.