

Fast Plot

Instruction for Large Format Printer refillable cartridge compatible with Epson printers

Applicable for Epson: 4000 / 4800 / 7400 / 7600 / 7800 / 9400 / 9600 / 9800

Step 1: Before you install, fill ink into the cartridge directly by using the funnel or the syringe. Please do not fill the cartridge to the top, leave 1/4 empty.

Step 2: Insert the cartridges gently - *remember the refillable cartridge is not totally sealed as a non refillable one, please avoid leaking problems* - into printer according to the colors.

Step 3: Run "POWER CLEANING" for the printer. Details are as below:

Menu>> MAINTENANCE >> POWER CLEANING. This procedure takes about 10 minutes.

Step 4: After finishing step 3, open the front cover of the printer and check if there is air inside the ink pipe. If no air, then you could begin using. If there is air, then please wait 5 minutes and then repeat Step 3 (Usually you should not repeat Step 3).

Step 5: Finally the printer can begin working. Please keep the rubber seal in the Ink Filling Hole when using.



Important

When you need to fill ink or take out cartridge, please make sure the printer is OFF before you remove those. Because there is big pressure inside the cartridge, we must be careful when removing the rubber seal from the ink filling hole. Otherwise the ink will splash.

The best filling time is before the ink gets down to 1/2 inside the cartridge. Please do not wait until the ink level is very low.

For daily use and resetting chips, please remember to take out the cartridge in horizontal direction. Never invert the cartridge or put it flatly. Besides, if you need to fill ink and reset chips at the same time, then fill with ink first and then reset the chips.

How to reset the chip

