


一 . Firstly please fasten the clip with the cartridge as the below picture shown.



二 . Draw about one third ink into the Vacuum Pump.

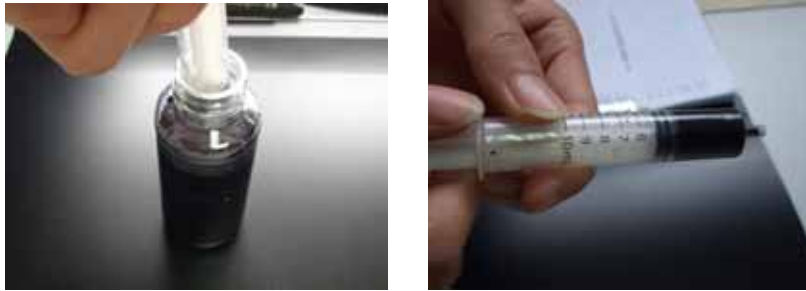

三 . Insert the Vacuum pump into the Ink-filling Hole as the below picture shown.



四 . Pull the plug backward to draw the air into the Vacuum pump.



五 . Then release the plug. The ink shall flow into the cartridge automatically as the below picture shown.



六 . When all the ink flow into the cartridge, pull the vacuum pump out and repeat the above procedure till the cartridge is full of ink.