

Instruction for Smart Cartridge

Step 1: Prepare 1 syringe with needle, 1 bottle of ink, and smart cartridge (Picture 1). Use the syringe with needle to draw ink from the ink bottle (Picture 2).



(1)




(2)

Step 2: Make sure that there is no plugs in the cartridge (Picture 3). Then insert the needle into the sponge (insert as deep as possible). And push the syringe, so that the ink flow into the sponge (Picture 4/5/6).




(3)

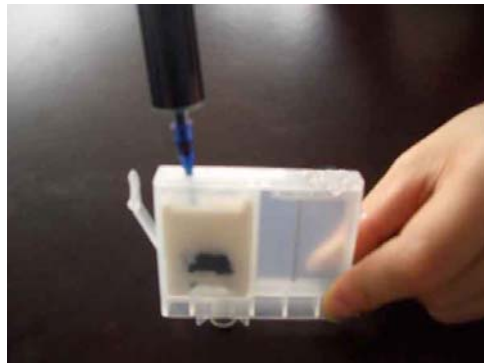

(4)



(5)

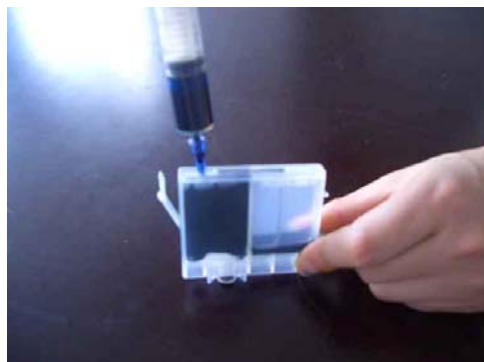


(6)


Step 3: If the cartridge is not full, then repeat the above steps until it is full (Picture 7/8/9).



(7)

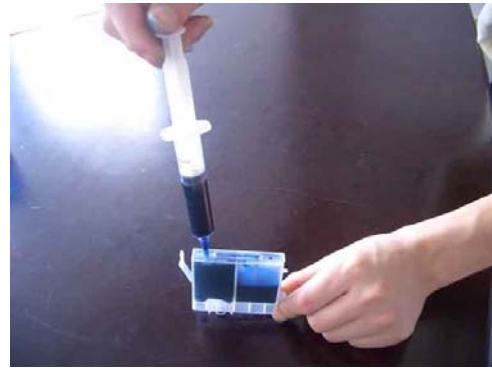


(8)

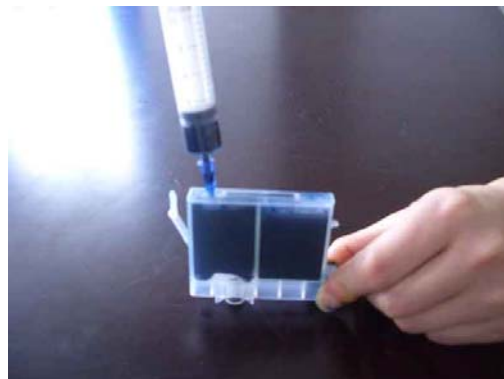


(9)

Step 5: Pls recover the plug in the Ink Hole. Keep the Air Hole open when using it.

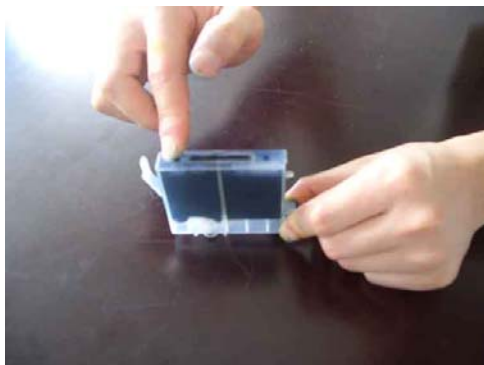

(10)

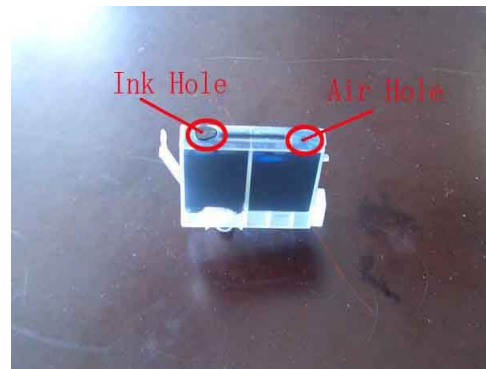

(11)